


Installation manual

M Motorized Swing Mount X-Large

EAN: 7350105212642

- en Installation Manual
- ar تثبيت الجال ليد
- cs Instalační manuál
- da Installationsmanual
- de Installationsanleitung
- eo Paigaldusjuhend
- el Οδηγίες εγκατάστασης
- es Manual de instalación
- fi Asennusohje
- fr Installation Manuel
- he הנקתה הידדמ
- hu Szerelési kézikönyv
- it Manuale di installazione
- jp 取り付け説明書
- kr 설치 설명서
- lt Montavimo instrukcija
- lv Uzstādīšanas rokasgrāmata
- nl Installatie handleiding
- no Installasjonshåndbok
- pl Instrukcja instalacji
- pt Manual de instalação
- ro Manual de instalare
- ru Инструкция по установке
- sk Inštaláčny manuál
- sl Navodila za montažo
- sv Installationsmanual
- tr Montaj kılavuzu
- zh 安裝手冊

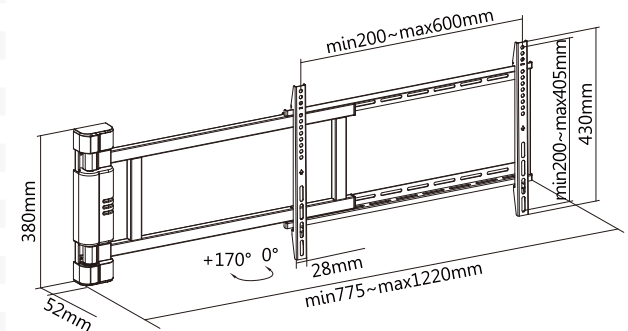

en **IMPORTANT!**
Your Plasma, LCD, TV, Projector, Projector Screen or other HiFi equipment represents a considerable value. If screws are included they may not be suitable for the material of your wall, ceiling or floor. Replace the screws with suitable ones if needed.
In case you are unsure regarding any aspects of the mounting of this product please Consult a professional.

ar **أهم!**
إن شاشة البلازما أو LCD أو التلفاز أو جهاز عرض أو شاشة جوال أو شاشة حاسب أو أي معدات أخرى ذات قيمة عالية تعتبر قيمة كبيرة جداً. في حال كانت المسماريات المرفقة مع المنتج غير مناسبة للمواد التي سيتم تركيب المنتج عليها، فاستبدلها بمسماريات مناسبة.
في حال عدم التأكد من أي جوانب تركيب هذا المنتج، فاستشر متخصصاً.

cz **DŮLEŽITÉ!**
Váš plazmový nebo LCD televizor, projektor, plátno a další elektrotechnické vybavení je vysoké hodnotné. Pokud jsou součástí balení produktu šrouby, zkontrolujte, zda jsou vhodné pro upevnění ke stěně, stropu nebo podlahě v místě instalace. V případě, že nebudou přibalené šrouby vyhovovat, vyměňte je.
V případě nutnosti přibalené šrouby vyhovovat, obraťte se na zkušeného odborníka. Při montáži tohoto produktu použijte, obraťte se na zkušeného odborníka.

da **VIKTIG!**
Din plasmaskærm, LCD-skærm, tv, projektor, projektoriskærm eller andet HiFi-udstyr repræsenterer en betydelig værdi. Hvis der medfølger skruer, passer de muligvis ikke til materialet i væggen, loftet eller gulvet. Udskift skruerne med passende skruer, hvis det er nødvendigt.
Hvis du er i tvivl om noget i forbindelse med monteringen af produktet, skal du kontakte en ekspert.

nl **BELANGRIJK!**
Uw Plasmava LCD TV, Projector, Projector scherm of andere HiFi-apparatuur vertegenwoordigt een aanzienlijke waarde. Indien er meegeleverde schroeven niet geschikt zijn voor uw toewassing. In dat geval dient u ze te vervangen door schroeven die wel geschikt zijn. Toeflits! In uw raadgeet dan een professional.

ee **TÄHTSI!**
Teie teker, projektor, projektori ekrään või muu HiFi seade on suure väärtusega. Kui kinnitustel on kaotatud või ettenähtud, ei ole võimalik kasutada. Teie seinale, lae või põrandale materjaliga. Vajadusel vahetage kruvid sobivate vastu.
Kui Te ei ole seadme paigaldamisel detailides kindel, siis konsulteerige spetsialistiga.

de **ACHTUNG!**
Ihr Plasma-, LCD-, TV-Gerät, Ihr Projektor, Ihre Leinwand oder sonstige HiFi-Ausrüstung stellen einen beträchtlichen Wert dar. Die möglicherweise im Lieferumfang enthaltenen Schrauben sind unter Umständen nicht für das Material Ihrer Wände, Decken oder Böden geeignet. Ersetzen Sie sie bei Bedarf durch geeignete Schrauben.
Wenn Sie bezüglich der Montage des Produkts ungewiss sind, wenden Sie sich an einen Fachmann.

el **ΣΗΜΑΝΤΙΚΟ!**
Οι τηλεοράσεις Plasma, LCD, οι κανονικές τηλεοράσεις, οι οθόνες προβολών ή άλλες συσκευές HiFi έχουν μία αξιοσημείωτη αξία. Αν παραβλεφθούν οι βίδες, ή αν υπάρχουν κάποια εργαλεία για το υλικό του τοίχου, του τavanού ή του ημιώστου, σίς, αντικαταστήστε τις βίδες με κατάλληλες αν είναι απαραίτητο. Στην περίπτωση που δεν είστε σίγουροι για κάποια σημεία σχετικά με την προεργασία του τοίχου, του τavanού, παρακαλούμε συμβουλευτείτε έναν ειδικό.

es **¡IMPORTANTE!**
Los equipos de plasma o LCD, los televisores, proyectores y pantallas de proyección, así como otros equipos de alta fidelidad suponen una inversión considerable. Si incluyen tornillos, puede que no sean adecuados para el material del que están formados la pared, el techo o el suelo. Sustituya estos tornillos por otros más adecuados si es preciso. Si no está seguro sobre cualquier aspecto del montaje de este producto, consulte a un profesional.

fi **TÄRKEÄÄ!**
Plasma- tai nestekidenäyttöjen, televisioiden, projektorien ja niiden valkokankaiden sekä muiden hiifilaitteiden arvo on huomattava. Laitteen mukana toimitettavat ruuvit eivät välttämättä sovellu seinien, katon tai lattian materiaaliin. Korvaa ne tarvittaessa sopivilla ruuveilla.
Mikäli olet epävarma mistä tahansa tämän tuotteen kiinnittämiseen liittyvästä seikasta, ota yhteys asiantuntijaan.

fr **IMPORTANT!**
Vos écrans plasma, LCD, télévisions, projecteurs, écrans de projection ou autre matériel Hi Fi ont une valeur considérable. Les vis fournies peuvent ne pas être compatibles à la nature de vos murs, plafonds et sols. Remplacez-les par des vis adaptées. Si vous avez des doutes quant au montage de ce produit, veuillez consulter un professionnel.

hu **FONTOSI!**
Plazma, LCD TV-k, projektorok, vetőhőszáraz vagy egyéb műszaki berendezések tekintélyes értéket képviselnek. Ha a csavarokat tartalmában, akkor sem biztos, hogy alkalmasak a berendezés, hogy falra, mennyezetre, vagy a padlóhoz rögzítés. Cserélje ki a csavarokat a megfelelőre, ha szükséges. Abban az esetben, ha nem biztos a termék beépítésével kapcsolatban, forduljon szakemberhez.

it **IMPORTANTE!**
I vostri plasma, LCD, TV, proiettori, schermi di proiezione o altri apparecchi Hi-Fi rappresentano un notevole investimento. Le viti in dotazione potrebbero rivelarsi non adatte per il materiale della parete, del soffitto o del pavimento. Sostituitele quindi con viti più idonee in caso di necessità.
Nel caso riscontrate problemi nel montaggio di questo prodotto, consultate un tecnico specializzato.

jp **重要!**
あなたのプラズマ、LCDは、テレビ、プロジェクタ、プロジェクタースクリーンまたは他のハイファイ機器はかなりの値を表します。
ネジがきかされている場合、彼らはあなたの壁、天井や床の材質に適していないかもしれません。
必要に応じて適切なものでネジを取り付けます。
ケースでは、本製品の取り付けのいずれかの側面に關して不明な点があるプロに相談してください。

WARRANTY CARD MULTIBRACKETS.COM

<p>MULTIBRACKETS™ Limited Warranty Multibrackets warrants its products to be free of defects in material and workmanship for the product's Warranty Period. The Warranty Period commences on the original purchase date of the product. All Multibrackets products are covered by a limited product warranty.</p> <ul style="list-style-type: none">• Five (5) years for meta video monitor mounts, all racks and non-electrical rack accessories• Two (2) years for gasfills and sit-stand workstations• One (1) year for all motorized and/or automated products, plastic speaker mounts, all speaker stands, all furniture, all wood (MDF) accessories	<p>For warranty claims made during the Warranty Period, Multi-Brackets will replace any defective product part free of charge. Should a part on your Multibrackets product fail, please create an RMA case on www.multibrackets.com/support to make a warranty claim. We will await your documentation and then discuss the problem with you and once we confirm the product is under warranty, we will ship replacement parts to you. This Limited Warranty does not cover the costs of removing and replacing defective parts from your Multibrackets product. So, if your problem requires a repair technician, you must pay any labor charges. This Limited Warranty extends only to the original purchaser of the product and is automatically void if your Multibrackets product is modified in any way, improperly installed, taxed beyond its stated weight capacity or otherwise misused or abused. All Multibrackets products are intended for indoor use only and any</p> <p>Multibrackets™ Stockholm Sweden 2016. www.multibrackets.com</p>
--	---

The content of this manual is subject to change without further notice. The latest version of this manual can be found online under the product name on the website: www.multibrackets.com

Warning!
Always check the depth of the holes before starting an installation.
تحذير!
الرجاء دائما فحص عمق الثغرات قبل ان تبدأ في عملية التركيب.

AVVARSLE!
Kontroller alltid hullernes dybde, før du går i gang med en installasjon.
WARNUNG!
Vor Beginn des Einbaus immer die Tiefe der Bohrungen überprüfen.
ΠΡΟΣΕΛΕΓΓΗΣΗ!
Ελέγχετε πάντοτε το βάθος των οπών πριν ξεκινήσετε την εγκατάσταση.
WARNING!
Always check the depth of the holes before starting an installation.
AVISO!
Controle siempre la profundidad de los agujeros antes de iniciar una instalación.
VORUUTSI!
Se kõik parameetrid enne asendamist alati mõista.
ATTENTION!
Vérifiez toujours la profondeur des trous avant de commencer l'installation.
ATTENZIONE!
Verificare sempre la profondità dei fori prima dell'installazione.
Varovani!
Pred zahajením inštalácie vždy zkontrolujte potrebnú hĺbku všetkých otvorov.
ADVARSLE!
Sjekki alltid hvor dype hullene er før du begynner å montere.
OSTRZEZENIE!
Przed przystąpieniem do montażu należy koniecznie sprawdzić głębokość otworów.
ПРЕДУПРЕЖДЕНИЕ!
Перед установкой всегда проверяйте глубину отверстий.
VAROITUS!
Kontrolli alid hällens djup innan en installation påbörjas.
UYARI!
Montaja başlanmadan önce daima deliklerin derinliğini kontrol edin.
警告
请在刚开始安装前检查孔洞的深度。

motorized wall mount (x1) A	wall template (x1) B	adapter bracket (x2) C	(x1) D	(x1) E	
bubble level (x1) F	power supply (x1) G	remote control (x1) H	(x5) I	4mm (x1) J	
M-A (x4) M5x14	M-B (x4) M6x14	M-C (x4) M6x30	M-D (x4) M8x30	M-E (x4) M8x50	
M-F (x4) D5-D8	M-G (x8) Ø15xØ8x5	M-H (x8) Ø15xØ8x15	W-A (x6) ST6.3x55	W-B (x6) Ø10x45	W-C (x4) D6




Note: Read the entire instruction manual before you start installation and assembly.

choose swing out direction

Swing out right Swing out left

OR

1

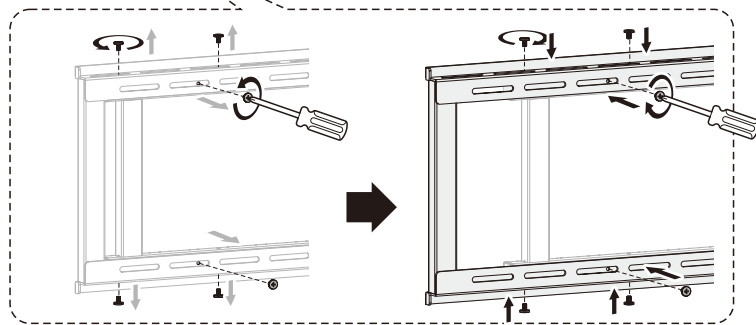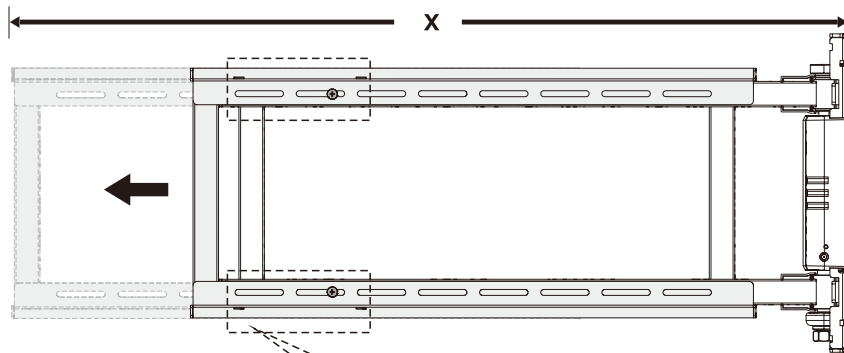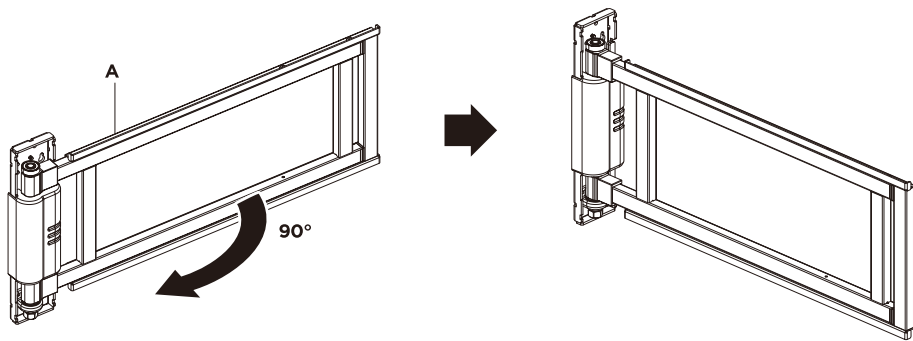


The swing arm needs to be adjusted according to the size of TV.

$$X = L/2 + 330(\text{mm})$$




X: Length of swing arm
L: Length of TV

2a

Forward Installation

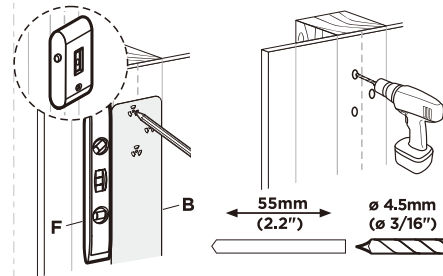


Reverse Installation


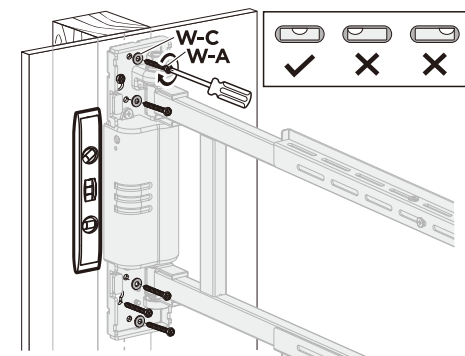
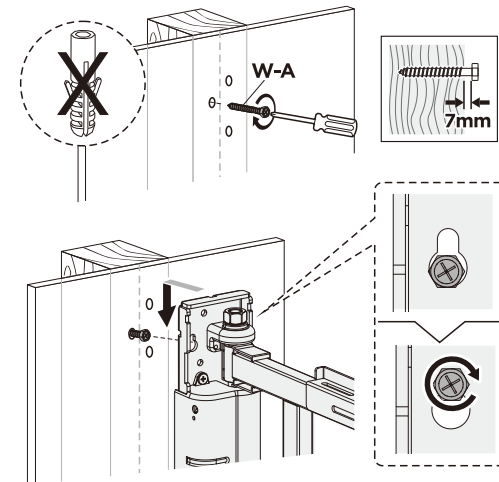
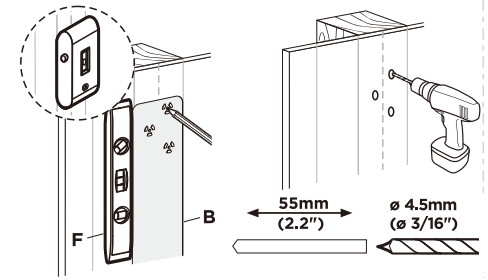


2b


Forward Installation

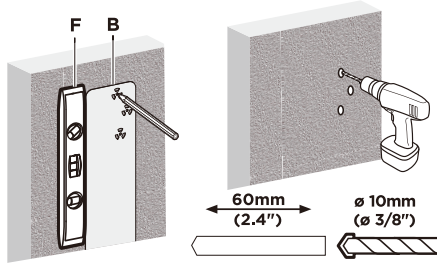


Reverse Installation

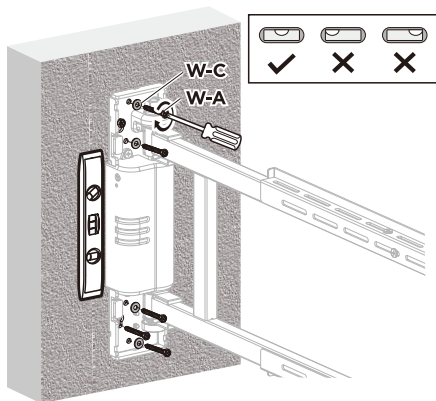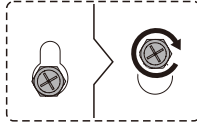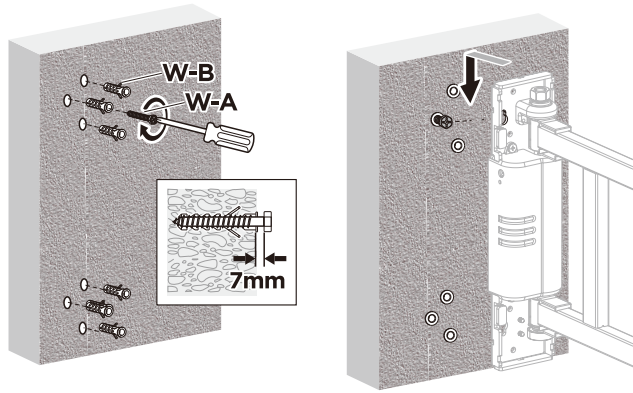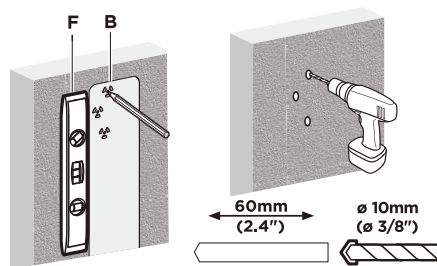


3

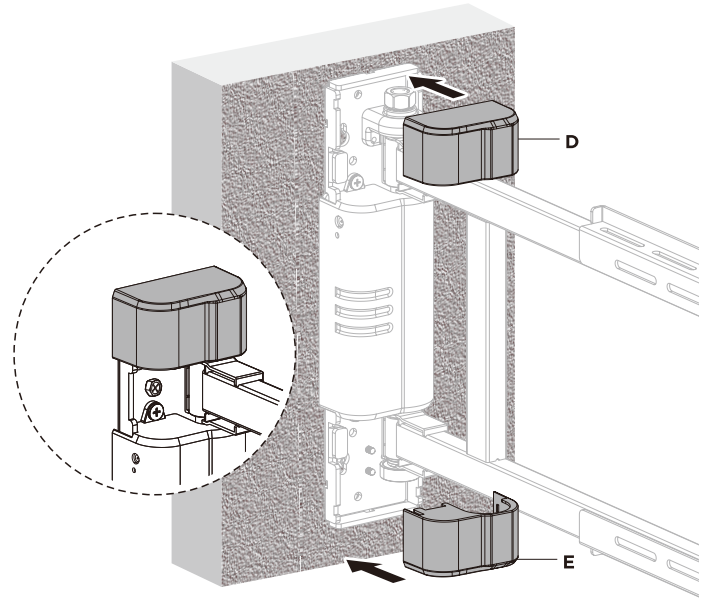


4

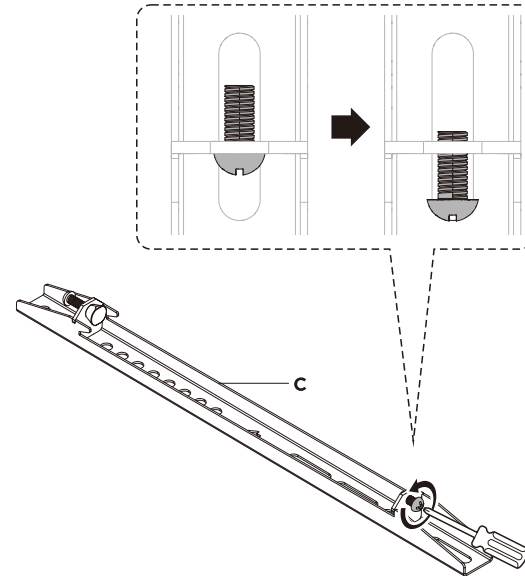


5

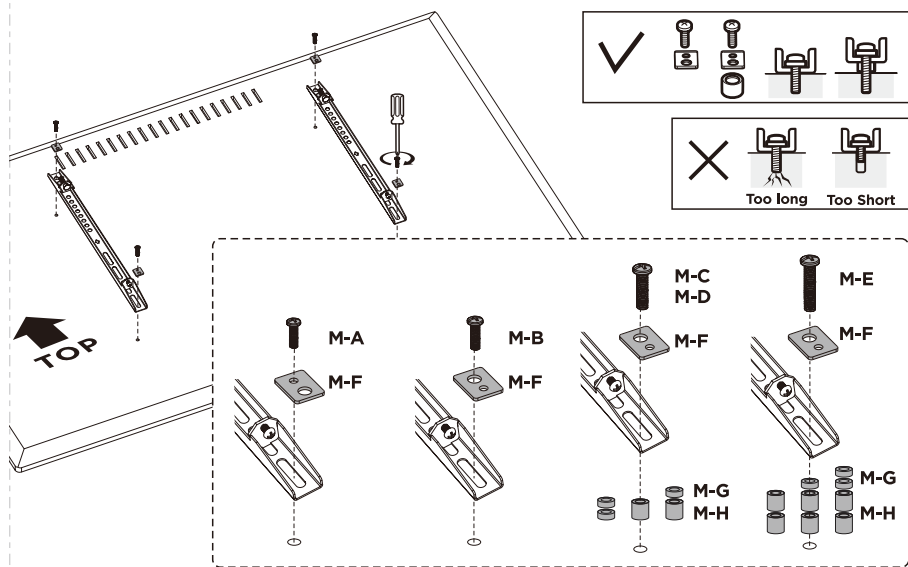



6

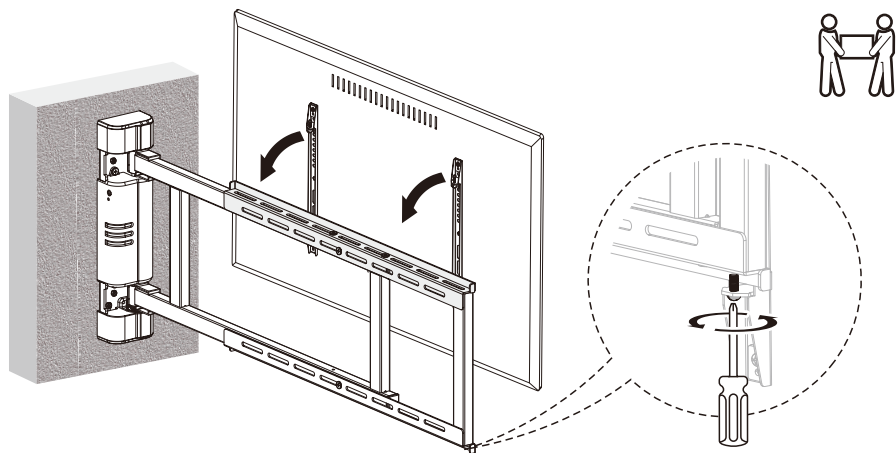

7

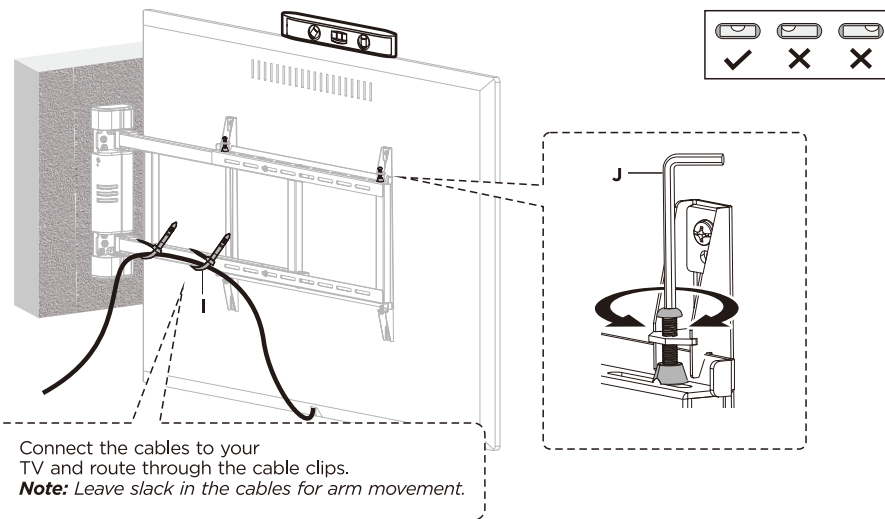

8

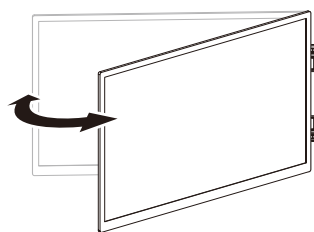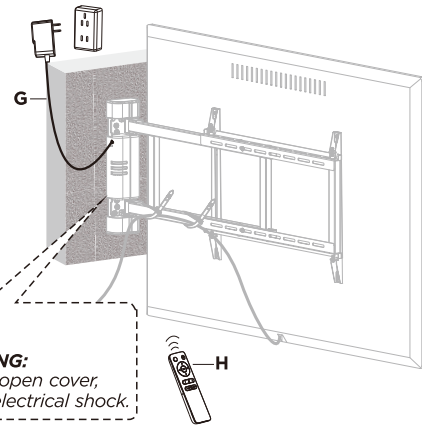

The Remote Control Operation Instructions


1 Pairing the Remote to the Mount

STEP 1:


Apply power, and then using a pin or other small item (such as a paperclip) press the code button located on the side of the TV Mount. You will hear a "beep" sound after pressing the code button.

STEP 2:


Press , you will hear a series of "beep" sounds for 10 seconds, the remote control is now successfully paired to the TV Mount.

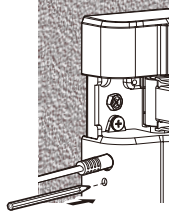


2 Resetting the System


Press and hold  for 5 seconds. The system will start moving automatically, the TV wall mount will move to a 0 degrees position and then stop with a beep sound, which indicates that you successfully reset the system.


3 Storing a TV Mount Position in Memory 1

When the TV Mount is in the desired position, press and hold  for 2 seconds - you will hear a single "beep" sound indicating the position has been successfully saved in Location 1 of the Remote Control.

4 Storing a TV Mount Position in Memory 2

When the TV Mount is in the desired position press and hold  for 2 seconds - you will hear a single "beep" sound indicating the position has been successfully saved in Location 2 of the Remote Control.

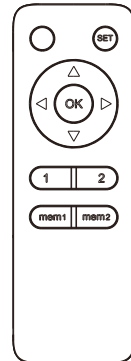


5 To recall the first saved position, press , the TV wall mount will automatically swivel to the location 1 position.

6 To recall the second saved position, press , the TV wall mount will automatically swivel to the location 2 position.

7 Press and release , the TV wall mount will swivel to the left, press  to stop.

8 Press and release , the TV wall mount will swivel to the right, press  to stop.


9 The TV wall mount can be installed on two directions (normal or reverse installation). When you find the swivel direction of the TV wall mount is different from the direction button you pressed, set the remote control by following the process: press and hold  for 5 seconds until you hear beep sound, the remote control is now successfully set to operate the mount.


10 Adjust the TV position over 90°(≤170°)

Default swivel range: 0°-90°

Step 1: Adjust the TV mount to the desired position manually.

Step 2: Unplug and replug the power of the TV mount.

Step 3: Press and hold  until the buzzer sounds one "beep". Repeat this step 5 times until the buzzer sounds "beep beep", indicating the new position is successfully saved.

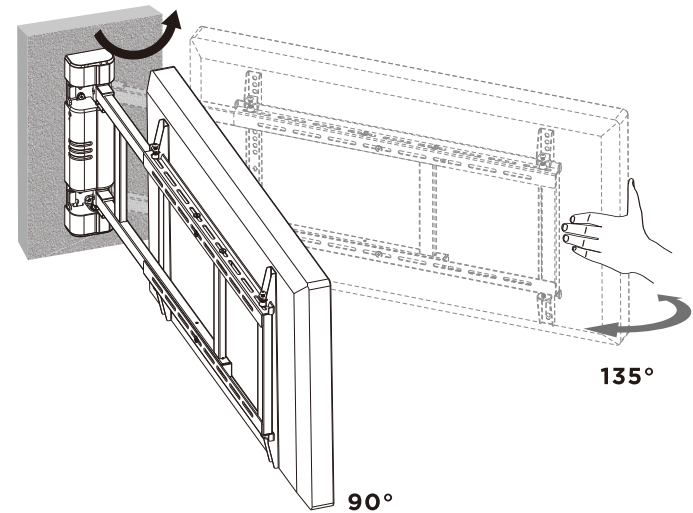

Error Indications:

Over-current Protection: The buzzer makes a "beep beep" (2 beeps) once

Sensor indicates the mount is over range: The buzzer makes a "beep beep" (2 beeps) twice

Sensor indicates an operating fault: The buzzer makes a "beep beep" (2 beeps) three times

Unit senses abnormal power: The buzzer makes a "beep beep" (2 beeps) four times

In Front

This guide intends to help you identify and solve the minor problems caused by unusual operation of the electric system of our electric TV mounts. The simple procedures in this manual are easy to follow and capable of solving the most problems happened in everyday use.

Error Indication

1. The Buzzer Constantly Gives Out Alarm Sound: The Error Of Positioning Signal

 
Reset the system by the instruction manual.



Remote Control Problems

1. Buttons On Remote Control Don't Work. Or The Insensitivity Of Remote Control.

Please check if the batteries have power. if not, please replace the batteries.



Abnormal Operation

1. The TV Mount Can't Be Adjusted To 0° Or 170°

Please reset the system by following the instruction manual.

 


2. How to reset

Please check the page 9, "Resetting the System"

3. TV Mount Stops Suddenly

Please check that cables and other accessories on backside is not creating the TV mount to stop its movement



Test following if the product is not operating properly

Check that all cables are connected, take out plug in. Check that the battery in your remote is new and fresh. Check that the power adapter is properly connected. There should be a buzzer sound and red light indication on the product.



The product is powered by electricity. In order to avoid burns, fire and electric shock and make sure the safe and correct use of the system and maintain the longevity of the overall construction and the built-in electronics, please read the instructions carefully.

WARNING

- The mount will stop when the Apple TV or too many cables are added.
- The child safety kicks in and movement is stopped.
- This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge must not use the appliance, unless they're under supervision, understand the hazards involved or they have been thoroughly instructed in the use of the apparatus by a person who is responsible for the safety of these persons.
- Don't leave the cords or plug unorganized in order to prevent tripping hazards.
- Any attempts to reconstruct the construction aren't allowed.
- Do not begin the installation until you have read and understood all the instructions and warnings contained in this installation sheet. If you have any questions regarding any of the instructions or warnings, please contact your local distributor.
- This mounting bracket was designed to be installed and utilised ONLY as specified in this manual. Improper installation of this product may cause damage or serious injury.
- This product should only be installed by someone with good mechanical ability who has basic building experience and fully understands this manual.
- Make sure that the supporting surface will safely support the combined weight of the equipment and all attached hardware and components.
- Always use an assistant or mechanical lifting equipment to safely lift and position the equipment.
- Tighten screws firmly, but do not over tighten. Over tightening can cause damage to the items, This greatly reduces their holding power.
- This product is intended for indoor use only. Using this product outdoors could lead to product failure and personal injury.
- Please do not disassemble or change the electronic components of the product without authorization.

Electrical Safety Instructions

- The appliance is only to be used with the power supply unit provided with the appliance. Alterations of the given power unit aren't allowed.
- Never operate the system with a damaged power supply cord or plug. If any parts is damaged, please contact your service agent of purchase for a replacement.
- Never operate the system if it's in moist environment or its electrical components has contact with liquids.
- Don't clean the product while the power is still connected.
- Don't disassemble or replace components while the power is still connected.
- Unplug the appliance when the system isn't in use, and place the power plug out of children reach.

